

The StreetEagle VTU Troubleshooting Guide

The StreetEagle tracking unit has 4 LEDs

- Constant power - on all the time
- Ignition power – turns on and off with the ignition
- Cell – turns on when cell signal is acquired
- GPS - turns on when GPS signal is acquired

Troubleshooting the StreetEagle tracking unit should be done with the vehicle on.
All four lights should be lit up during proper operation.

Problem	Solution
Power LED is not lit	Verify that the red wire is connected to constant power.
No ignition LED	Verify the silver wire is not connected to a switch power source
Cell light is not on	Check for proper installation of the antenna. Verify that the data account is active.
GPS light is not lit	Verify that the GPS antenna has a clear view of the sky. Verify that the GPS antenna is connected to the tracking unit